


3. Use the bolt provided and insert in the hole below the crossbow's mouth , tight using the Allen wrench provided.

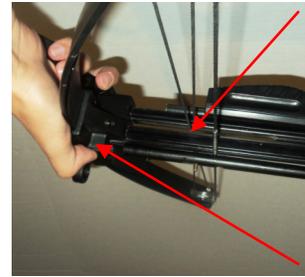

2. Make sure the crossed strings are inside the barrel as the picture above shows.



1. Mount the limb system in the deck of the body , make sure it is fully assembled .

Assembly Instructions



William Tell Archery



VADER

MULTIFUNCTIONAL CROSSBOW

What is included:


- Crossbow
- Manual
- 3 short arrows
- 20 steel balls

Specs.

- Draw weight (tension test): 130 lbs
- Weight: 5.06 Lbs
- FPS :220
- Magazine capacity: 26 balls
- Stock: Nylon
- Limbs : Steel

1. Put a coat of linseed or tung oil every 6 months.
2. Check cams and string periodically.

Maintenance

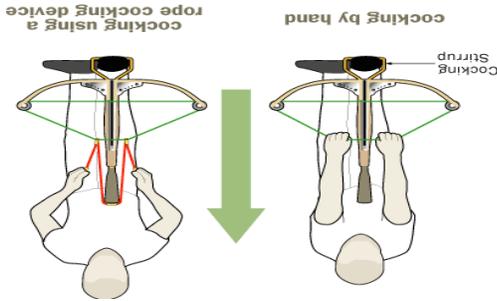

1. Place your foot completely through the stirrup. Grab the string in each hand next to both sides of the mainframe. Learn to use your hands as guides.
- Note: Be sure to insert your foot far enough into the stirrup so that the crossbow cannot slip off your foot when cocking, as this can cause serious harm to you.
2. With the safety in the upward or fire position and your arms locked, pull the string back by standing straight up until you hear a click in the trigger housing.
3. After the string is drawn back, relax string tension slightly to be sure that the string is held securely by the string latch. If the string is not held securely, pull back again until you hear the click in the trigger housing.

Loading your crossbow

Loading pellets

1. Open the magazine window by sliding the window stick forward , and add up to 26 pellets.



Shooting pellets.

1. Cock your crossbow.
2. Pull the safety bar.



3. Pull the loader and a new ball will be ready to shoot.

Contact us

EBAY: WILLIAMTELLARCHERYSUPPLIES
 E-mail: contactus@williamtellarchery.com
 Website: WWW.WILLIAMTELLARCHERY.COM

WARRANTY

William Tell Archery crossbow's body and limbs are warranted for a year from purchase.
 Strings are not warranted but can be ordered through us.

