




1. Open the magazine by unscrewing the cover in the back of the magazine, and add up to 200 pellets.

### Loading pellets



2. Once you cock it, release the safety and shoot.

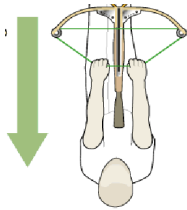

1. Place the stock against your belly, grab the string from each side, and pull it towards you. Once you hear a "click" sound, your crossbow is cocked.

### Loading your crossbow

### Shooting pellets.

1. Cock your crossbow.
2. Release the safety and it will load a pellet.
3. To shoot again, cock the crossbow and release the safety again. A new pellet will drop in the crossbow's deck.

### Maintenance

1. Put a coat of linseed or tung oil every 6 months.
2. Check cams and string periodically.


### Contact us

EBAY: WILLIAMTELLARCHERYSUPPLIES  
 E-mail: contactus@williamtellarchery.com  
 Website: WWW.WILLIAMTELLARCHERY.COM


### WARRANTY

William Tell Archery crossbows' body and limbs are warranted for a year from purchase.  
 Strings are not warranted but can be ordered through us.

3. Attach the wolf eye light and tactical light as shown in the picture.

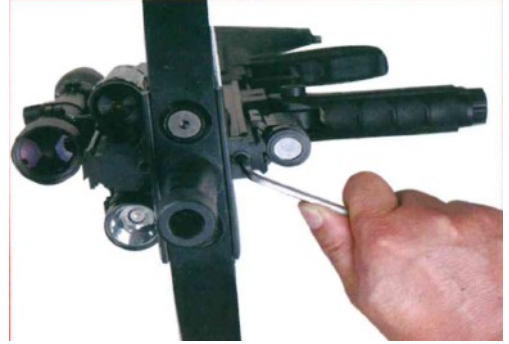

2. Insert the bolts provided in the holes located above and below the crossbow's mouth, and tighten using the Allen wrench.

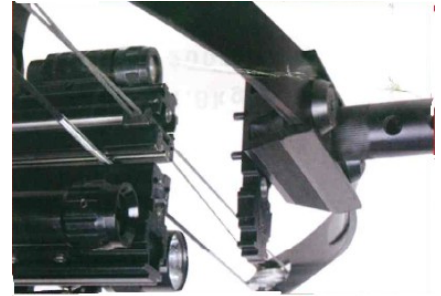

1. Mount the limb system in the deck of the body, making sure the four pins fit and the crossed strings are inside the barrel.

### Assembly Instructions



# William Tell Archery



## WT-4 MULTIFUNCTIONAL TACTICAL CROSSBOW

### What is included:

- Crossbow
- Manual
- 2 X featherless arrows
- 1 x fishing fork
- 40 steel balls
- Tactical light
- Laser sight
- Wolf light

### Specs.

- Draw weight (tension test ): 150lbs
- Cam draw : 70 lbs
- Weight: 6.82 Lbs
- FPS : 250
- Magazine capacity: 200 balls

